

Parts catalog

AX-M40

Illus. No.	PARTS NO.	PARTS NAME	QT'S		
1	AXM40-01-001	TOP COVER	1PC		
2	11032-01-002	RETAINER-MAIN SHAFT	1PC		
3	11032-01-003	RETAINER-TRANSMISSION SHAFT	2PC		
4	AXM40-01-004	GEAR HOUSE COVER	1PC		
5	AXM40-01-005	CASE-TRANSMISSION	1PC		
6	GM40-01-007	CONTROL PANEL	1PC		
7	11012-04-008	OIL BAFFLE	1PC		
8	AXM40-01-006	REAR COVER OF MIXER HEAD	1PC		
9	11032-02-001	MAIN SHAFT	1		
10	11032-02-006	DETAIN-FIXED COVER	1		
11	11032-02-014	58T GEAR	1		
12	11032-02-018	SLEEVE DRIVE	1		
13	11031-02-013	PIN	12		
14	11031-02-012	SPRING SHEET	12		
15	11032-02-007	BEVEL GEAR	1		
16	11032-02-009	33T GEAR	1		
17	11032-02-010	COPPER BUSHING	1		
18	11032-02-011	CLUTCH	1		
19	11032-02-013	COPPER BUSHING	1		
20	11032-02-012	45T GEAR	1		
21	11032-02-016	SPACER	1		
22	11032-03-001	GEAR SHAFT	1		
23	11032-03-002	47T GEAR	1		
24	11032-03-004	35T GEAR	1		
26	11032-04-006	SHAFT- WORM GEAR	1		
27	11032-04-007	WORM GEAR	1		
28	11012-02-010	SPACER	1		
29	AXM40-05-001	MOTOR-1.5HP	1		
30	11032-06-001	30T BEVEL GEAR	1		
31	11032-06-003	HUB ATTACHMENT	1		
32	11091-06-004	HOLE PLUG	1		
33	GM20-06-005	THUMB SCREW	1		
34	11012-06-006	OIL BAFFLE	1		
35	11031-07-001	KNOB-SHIFT HANDLE	1		
36	11031-07-002	SHIFT HANDLE	1		
37	11031-07-003	BASE ASSY- HANDLE	1		
38	GM40-07-004	SHAFT- SHIFT ECCENTRIC	1		

39	11012-07-005	BRACKET- SHIFT SELECTOR	1		
40	11012-07-006	ECCENTRIC-SHAFT	1		
41	11031-07-007	SCREW	2		
42	11031-07-008	PLUNGER SHAFT- SHIFTER	2		
43	11032-07-009	FIXING SHAFT- SHIFTER	1		
44	11032-07-010	SHIFT FORK	1		
45	11031-07-011	COMPRESSION SPRING	2		
46	11031-07-012	COMPRESSION SPRING	2		
47	11032-08-001	INTERNAL GEAR	1		
48	11032-08-002	18T GEAR	1		
49	11031-08-003	HEAD RING	1		
50	11032-08-004	PLANETARY HEAD	1		
51	11032-08-005	AGITATING SHAFT	1		
52	11031-08-006	SPACER	1		
53	11032-08-012	TAPERED PIN	1		
54	11032-09-001	COLUMN	1		
55	11032-09-002	SLIDEWAY	2		
56	11032-09-003	APRON	1		
57	11040-09-004	BASE	1		
58	11031-09-006	COLUMN COVER	1		
59	11031-09-007	PLATE	1		
60	11031-09-008	PANEL OF SPECIFICATIONS	1		
61	11031-09-009	SEAT OF CONTACTOR	1		
62	GM30-10-001A	BOWL CLAMP (LEFT)	1		
63	GM30-10-001B	BOWL CLAMP (RIGHT)	1		
64	11040-10-005	BOWL LOCATING PIN	2		
65	11031-10-003	RETAINER-BOWL	1		
66	11040-10-004	BOWL SUPPORT	1		
67	11031-11-001	LIFTING BAR	1		
68	11031-11-002	LIFTING HANDLE BRACKET	1		
69	11031-11-003	INNER ARM	1		
70	GM40-11-004	LIFT HANDLE	1		
71	11031-11-005	COMPRESSION SPRING	1		
72	11031-11-006	SPACER	4		
73	11040-12-001	BOWL	1		
74	11040-12-002	BEATER	1		
75	11040-12-003	SPIRAL HOOK	1		
76	11040-12-004	WIRE WHIP	1		
77	BM30-13-001A	SEAT OF SAFETY GUARD	1		

78	GM40-13-002A	SLIDING OPENER	1		
79	GM40-13-004	REAR COVER OF SAFETY GUARD	1		
80	11031-13-003A	FIXED RING	1		
81	BR-6206Z	BALL BEARING	2		
82	BR-6207ZZ	BALL BEARING	1		
83	BR-6005Z	BALL BEARING	2		
84	BR-6205Z	BALL BEARING	3		
85	OS-TC44*60*09	OIL SEAL	1		
86	OS-TC30*45*08	OIL SEAL	1		
87	OS-TC35*62*10	OIL SEAL	1		
88	OS-TC30*45*08	OIL SEAL	1		
89	BR-3020	BEARING	2		
90	CR-S32	C SNAP RING	1		
91	CR-S25	C SNAP RING	2		
92	CR-S24	C SNAP RING	1		
93	SB-6	STEEL BALL	2		
94	OR-P9	O RING	1		
95	OR-33.5*37.5*2	O RING	1		
96	OR-G60	O RING	1		
97	KRR-8*8*50	KEY	1		
98	KRR-8*8*30	KEY	2		
99	KRR-8*8*20	KEY	1		
100	KRR-8*8*25	KEY	2		
101	KRR-6*6*25	KEY	1		
102	KR-1/4*1/4*65	KEY	1		
103	SPP-8*25	Spring Pin #8*25L	2		
104	SPP-4*24	Spring Pin #4*24L	1		
105	SPP-10*24	Spring Pin #10*24L	2		
106	SPP-8*24	Spring Pin #8*24L	2		
107	SPP-4*25	Spring Pin #4*25L	2		
108	TP-6*30	Tapered Pin #6*30L	1		
109	TP-4*32	Tapered Pin #4*32L	1		
110	S+R3/16*3/8	Mac. Screw W3/16**3/8"L	8		
111	S+R3/16*1/4	Mac. Screw W3/16**1/4"L	16		
112	S+F3/16*1/2	Mac. Screw W3/16**1/2"L	4		
113	S-5/16*5/8	Bolt W5/16**5/8"L	6		
114	S-5/16*1	Bolt W5/16**1"L	8		
115	S-1/4*5/8	Bolt W1/4**5/8"L	8		
116	S-3/8*1	Bolt W3/8**1"L	1		

117	S-1/2*3/4	Bolt W1/2"*3/4"L	2		
118	S-5/16*3/8	Bolt W5/16"*3/8"L	2		
119	S-3/16*3/8	Bolt W3/16"*3/8"L	6		
120	S-1/4*3/8	Bolt W1/4"*3/8"L	4		
121	S-C-3/8*1-1/4	Cap Screw W3/8"*L1-1/4"	7		
122	S-C-1/4*1	Cap Screw W1/4"*L1"	6		
123	S-C-3/8*1-1/4	Cap Screw W3/8"*L1-1/4"	4		
124	S-C-5/16*3/4	Cap Screw W5/16"*L3/4"	8		
125	S-C-1/2*2	Cap Screw W1/2"*L2"	4		
126	S-C-1/2*2	Cap Screw W1/2"*L2"	2		
127	S-S5/16*5/8	Set Screw W5/16"*5/8"L	1		
128	S-S5/16*2	Set Screw W5/16"*2"L	1		
129	S-S5/16*3/8	Set Screw W5/16"*3/8"L	1		
130	S-S5/16*3/8	Set Screw W5/16"*3/8"L	2		
131	SW-3/8	Spring Washer $\text{Æ}3/8$ "	8		
132	SW-1/2	Spring Washer $\text{Æ}1/2$ "	6		
133	SW-5/16	Spring Washer $\text{Æ}5/16$ "	2		
134	NUT-3/8*16NC	Nut W3/8"*16NC	1		
135	NUT-5/16*18NC	Nut W5/16*18NC	1		
136	NUT-1/2*12NC	Nut W1/2"*12NC	10		
137	∅1/2	PLUG	3		
138	S-C-1/4*2-1/2	Cap Screw W1/4"*L2-1/2"	3		
139	11031-10-005	Compression Spring	2		
140	11032-13-007	Plunger	1		
141	11040-13-006	Seat of Limit Switch	1		
142	11032-05-006/60HZ	GOVERNOR PLATE	1		
143	11032-05-007/60HZ	GOVERNOR	1		
145	XLGM07-ROHS	CONTROL PANEL	1		
146	D11001R	STICKER OF PANEL	1		
147	XL711-ROHS	RELAY-CONTROL BOX	1		
148	11031-E-010	CAPACITOR	1 pc		
149	Z15GQ22B	LIMIT SWITCH FOR GUARD	1 pc		
150	Z15GQ22B	LIMIT SWITCH FOR LIFT	1 pc		
151	XL710-L2	INTERNAL WIRE-PANEL/BOX	1 pc		
152		INTERNAL WIRE-LIMIT SWITCH	2 pc		
153	CABLE-14-3C-UL	POWER CABLE	1 pc		
154	CG-20	CABLE TIE	1 pc		
155		EMERGENCY STOP	1 pc		
156		CONTACTOR	1 PC		